

Rental City Inc.

14809 West Center Rd.
Omaha, NE 68144

(402) 334-5190
www.rentalcityomaha.com

INFLATABLE OPERATING INSTRUCTIONS

IT IS YOUR RESPONSIBILITY TO FOLLOW THESE RULES:

1. Adult supervision is required at all times.
2. For 15' Inflatable, 8-10 children at one time or 5-6 adults, 13' Inflatable, 6-8 children or 3-4 adults, 10' inflatable, 3-4 children and no adults.
3. Jumpers should be the same age group and relative size.
4. Users must remove shoes, eye glasses, and jewelry. Empty all pockets of any hard or sharp objects.
5. No food, drink, gum or candy in unit.
6. **NO SILLY STRING IN OR AROUND UNIT.**
7. Unit must be anchored down properly with anchors provided.
8. Area required must be flat & free of animal droppings, stones, stumps, etc.
9. For the safety of all users, all outdoor use must have GFCI ground fault protection. All inside use must have proper grounded outlets (3-prong.)
10. For the safety of all users, extension cord must be for outside use, grounded (3-prong) & Max. 100' long, 12 gauge cord.
11. If unit becomes soft or starts to deflate, exit immediately and check connections.
12. Any persons under the influence of drugs, alcohol, or acting in a rowdy or dangerous fashion must be removed immediately.
13. If severe weather should arise, close ride immediately.
14. Do not leave unit deflated in rain or overnight. Roll up unit that night.

Hours of Operation:

Sunday: 9:30am – 3:00pm


Monday – Friday: 7:30am – 6:00pm

Saturday: 8:00am – 5:00pm

SETTING IT UP

1


The moonwalk has four parts – the unit, blower(s), extension cord(s) and anchors. Select an area...

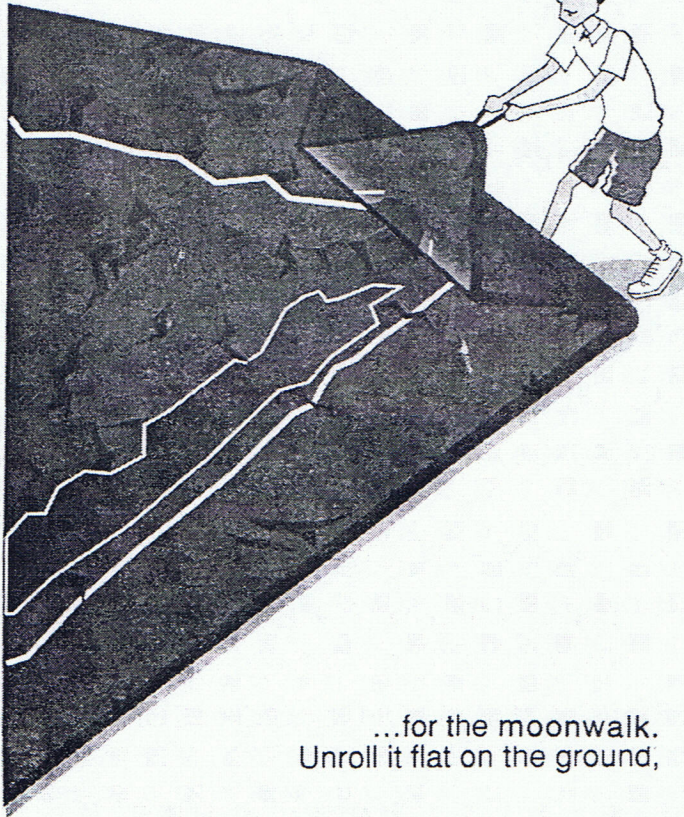

...for the moonwalk.
Unroll it flat on the ground,

4


Using only one 50 foot extension cord for each blower.

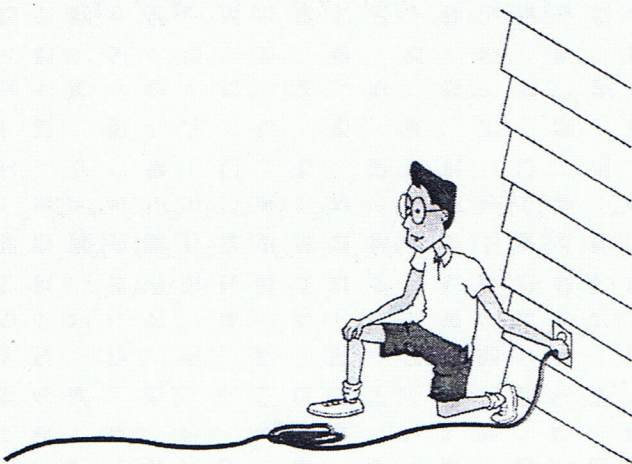

PLUG BLOWER INTO A SEPERATE 15-20 AMP OUTLET ONLY. IF BLOWER POPS A CIRCUIT UN PLUG THE FAN AND BE SURE THE FAN IS THE ONLY THING PLUGGED INTO THAT CIRCUIT,RESET AND TRY AGAIN.


2

USING STRAPS PROVIDED, TIE ONE OF THE VENT TUBES COMPLETELY CLOSED.

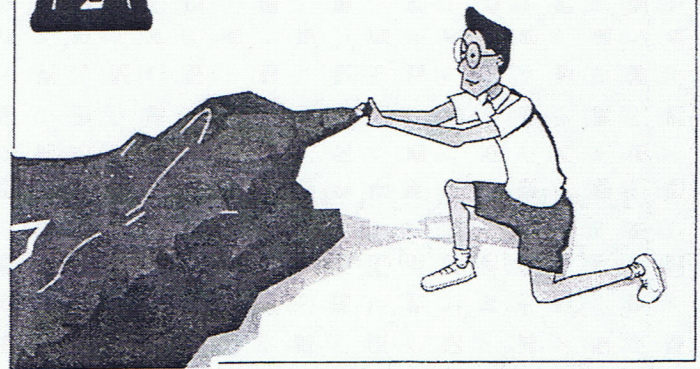


3

Slip the six foot tube in the rear of the moonwalk snugly around the blower outlet and secure it with the draw string.

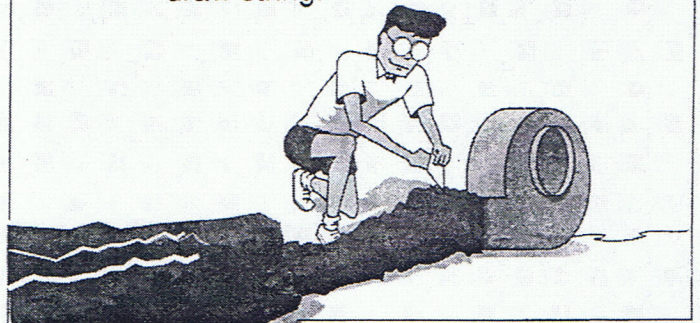

5

Inflation takes five minutes. The blower runs continuously while the moonwalk is in use. Once inflated, unit can be re-positioned then anchored into final position.

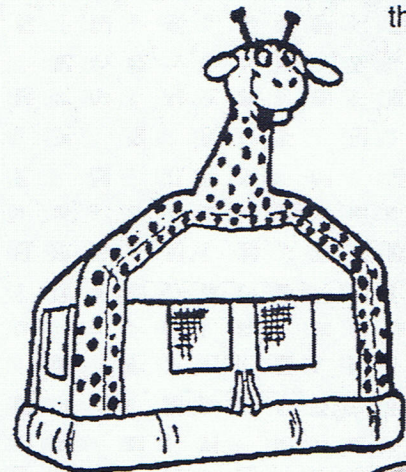


Moonwalk must be anchored

Hammer stake into ground and then tie rope from unit to anchor.

Stake should be within 12 inches from unit to prevent tripping.

To test the anchor, pull up with a firm lifting force to assure it is secure.

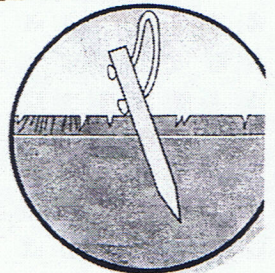


TAKING IT DOWN

1

Remove riders from the unit and unplug blower. Disconnect the blower from the unit and open the air vents.

CAUTION: Do not jump on partially inflated unit.


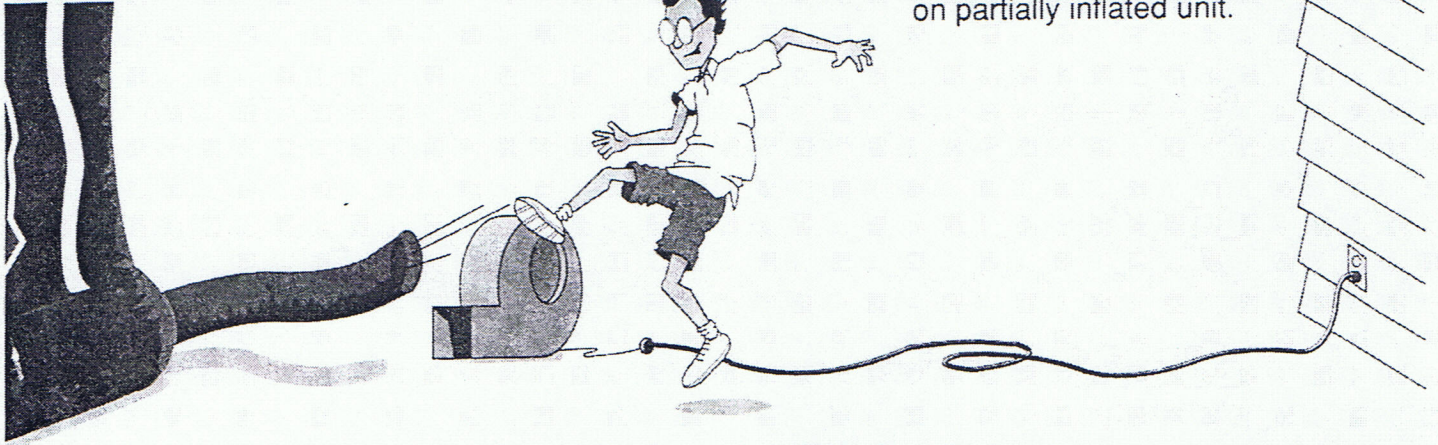


2

When the unit is deflated, fold each side to the center allowing one side to overlap the other.

3

Next, fold in half again to form single width.

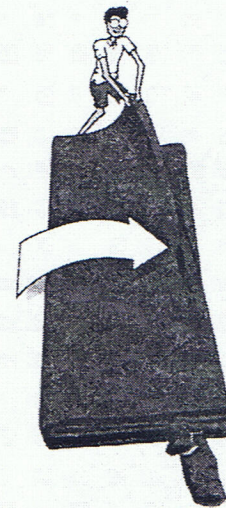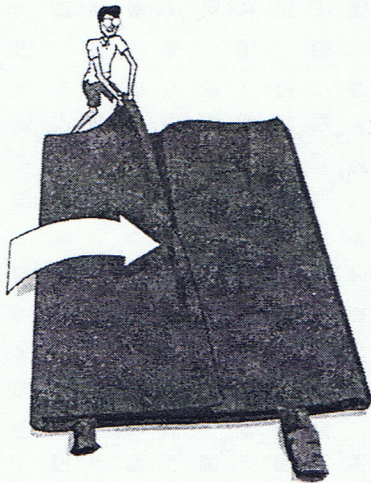


4

Starting from the door, roll the unit toward the rear pushing any excess air from the moonwalk.

5

Place tie straps under the unit, tuck in the tubes and tie the bundle so it is secure.

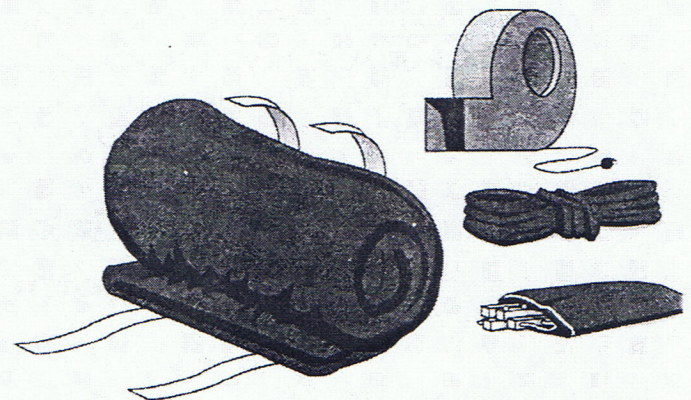

HINTS & REMINDERS

DEPOSITS

- All deposits are NON-REFUNDABLE. If you cancel due to inclement weather, your deposit will be retained and you can reschedule within 365 days of your original event date.

BLUE TARPS

- These are provided to go under the inflatable to protect the unit when it is being setup on concrete.

STAKES

- In most cases 4 stakes are used to anchor the unit to the ground. Stakes need to be returned.

STRAPS

- Every inflatable comes with at least one strap that is used to hold it together during transport. Straps need to be returned.

EXTENSION CORDS

- We do supply 1 extension cord; however we will rent another if needed. A 12 GAUGE size cord is necessary.

BLOWERS

- You must keep your blower plugged in as long as you are using the inflatable. When unplugged, the inflatable will deflate.

PICK-UPS

- You will need a pickup truck, station wagon, mini van, or SUV to pick up the inflatable. They do not fit in car trunks or back seats. All inflatable come rolled up on an appliance dolly for transport.

RAIN

- Unfortunately sometimes this happens. It is your choice to take the inflatable or not. If you cancel, see DEPOSIT above. If using in the rain, do not attempt to cover blower, keep inflatable inflated until ready to take down and roll up. Do not leave unrolled in rain overnight.