

Rental City Inc.

14809 West Center Rd.
Omaha, NE 68144

(402) 334-5190

www.rentalcityomaha.com

Fog Machine W/Timer and Remote Instructions

Installation

1. Place the machine in a well ventilated area and make sure the fogger's vents are not covered or restricted.
2. Plug the machine into an appropriate outlet. The power draw is approximately 1000 watts, or 10 amps. The red LED will light, indicating that the fogger is receiving electrical power.
3. After about 7 minutes, the green "ready" light will illuminate, indicating that the fogger has heated up and is now ready for use.

CAUTION: The output nozzle gets very hot – DO NOT TOUCH IT. Keep the area in front of the machine clear up to 10 feet away.

Operation

1. **Manual Operation:** To create fog, press and hold down the green momentary switch on the remote control. Release the button to stop fogging; however, fog will continue to be produced for 10-15 seconds after you release the green button. You can create fog for up to a full minute. After that, the green LED will go out, indicating that the fogger has gone into re-heat mode. It takes approximately one minute for the fogger to re-heat, during which time the pump is shut down for safety reasons. When the green LED re-lights, the machine has re-heated, and power has been restored to the pump. The machine is ready to create more fog.
2. **Automatic Timer Operation:** Press the yellow button to activate the timer. The yellow LED will light indicating "Timer Activated." Adjust the duration of fog blast from 1-12 seconds with the left hand "Duration" knob; adjust the cycle time between blasts from 10 seconds to 5 minutes with the right had "Interval" knob. Keep in mind that fog will continue to come out fro 10-15 seconds after the duration has ended.